

I'm not a bot























The engine does not start (vehicles without a smart key system) ● Is the shift lever in P? Page 207 4-3. Page 468 8-1. Page 2 TABLE OF CONTENTS Vehicle specifications Index 8-1. Page 113 3-2. Using the storage features ■ Cargo net hooks The cargo net itself is not included as original equipment. Open glove remove the cover. Page 253 4-5. This system detects the conditions of the front passenger seat and activates or deactivates the devices for the front passenger. Page 274 4-6. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. (0.7 m) either of the outside front door handles and back door. (Troubleshooting) When a problem has occurred If you have a flat tire ● Stop the vehicle in a safe place and replace the flat tire with the spare tire. Take care not to damage the vehicle body Vehicles without a smart key system: Enter the vehicle being towed and start the engine. Page 261 4-5. Ask your Toyota dealer for details. If drivability problems persist, try changing the brand of gasoline. Page 390 6-3. Front corner sensor operation Rear corner sensor operation The distance display and buzzer When a sensor detects an obstacle, the direction of and the approxi-... Automatic transmis- • When parked on a slope and the shift lever is in P, sion "Park" mecha- is the vehicle securely stopped? Refueling CAUTION ■ When refueling the vehicle Observe the following precautions while refueling the vehicle. Page 267 The ABS, Multi Terrain ABS, VSC and Trailer Sway Control will not function correctly if different tires are fitted on the vehicle. • The electronic engine control system; (U.S.A.) • The electronic throttle control system; or • The electronic automatic transmission control sys- Have the vehicle inspected by your Toyota dealer (Canada) immediately. Other interior features ■ The power outlet can be used when The engine is running. ● Toyota recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system. The system should be used only when wheel spinning occurs in a ditch or rough surface. Theft deterrent system Engine immobilizer system The vehicle's keys have built-in transponder chips that prevent the engine from starting if a key has not been previously regis- tered in the vehicle's on-board computer. Maintenance and care Cleaning and protecting the vehicle exterior. 334 Cleaning and protecting the vehicle interior. ... When returning the rear seat cushions to their original posi- tions, make sure they are locked securely. Theft deterrent system ■ Certifications for the engine immobilizer system (vehicles without a smart key system) For vehicles sold in the U.S.A. FCC ID:MOZZRI-33BTY This device complies with part 15 of the FCC Rules. 468 P ■ System operation Part-time 4WD models: Stop the vehicle, shift the shift lever to N and shift the front-wheel drive control lever into L4. Using the storage features Coin holder/tissue pocket/pen holder Lift the lid while pulling up the knob to release the lock. Steps to take in an emergency Interior Exterior Warning message Details/Actions buzzer buzzer electronic detected when an attempt is Once made to start the engine. 260 (P. Page 34 ● Ensure that the belt and plate are locked and the belt is not twisted. Do not install the trailer hitch on the bumper; this may cause body damage. Page 454 7-2. Page 209 4-3. For safe use ■ Unoccupied "AIR BAG ON" and "AIR BAG OFF" Not illuminated indicator lights Indicator/ SRS warning light warning light Seat belt reminder light Front passenger airbag Deactivated Side airbag on the front passenger seat Activated Curtain shield airbag in the front passenger side Devices Front passenger knee airbag... Page 459 The vehicle identification number (VIN) is the legal identifier for your vehicle. Using the driving support systems Shifting between H4F and H4L Push the "UNLOCK" button and turn the four-wheel drive control switch to H4L or H4F. Page 98 3-1. Using the driving support systems ■ Speed modes following table shows some typical terrains and the recommended speed modes. Firmly depress the brake pedal. Page 283 5-1. 473) 4RUNNER (U) (OM35B23U) I n f o r m a t i o n P r o v i d e d b y ... Page 280 5-1. Instrument cluster Instrument cluster Warning lights and indicators .....76 Gauges and meters .... Other interior features Safety information for Safety Connect Important! Read this information before using Safety Connect. Using the driving support systems Crawl Control Allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal. Page 357 6-3. Page 123 3-3. Do-it-yourself maintenance Bulb locations ■ Front Headlight low beam Front turn signal/parking light Headlight high beam/day- time running light Front side marker light Fog light ■ Rear Rear turn signal light Back-up light License plate light 4RUNNER (U) (OM35B23U) I n f o r m a t i o n P r o v i d e d b y ... Page 177 4-1. Page 43 1-1. Second row seats (with third Third row seats (if equipped) row seats) Pull down the second row seat center armrest and press down the button on the armrest. Remove the air conditioning fil- ter and replace it with a new one. (After operating several times, the wiper operates one more time after a short delay to pre- vent dripping.) Page 217 ■ When a nozzle becomes blocked In this case, contact your Toyota dealer. Key information Locking the doors from the outside without a key Move the inside lock button to the lock position. 35 Floor mat. Starting the engine Check that the parking brake is set. Using the air 5-4. 5-2. When shifting the shift lever between P and D, make sure that the vehicle is completely stopped. If the engine does not start, turn the engine switch to the "ON" posi- tion. Type A Turns the front fog lights Turns the front fog lights 4RUNNER (U) (OM35B23U) I n f o r m a t i o n P r o v i d e d b y ... Opening, closing the windows and moon roof ■ The moon roof can be operated when Vehicles without a smart key system The engine switch is in the "ON" position. For safe use ● The pad section of the steering wheel, dashboard near the front passenger air- bag or lower portion of the instrument panel is scratched, cracked, or other- wise damaged. Turn the engine switch off. 8-3. ● Le conducteur et les passagers du véhicule doivent porter correctement leur ceinture de sécurité. Have the vehicle inspected by your Toyota dealer immediately. Using the air conditioning system and defogger Seat heaters/ventilators Vehicles with ventilator Press the knob to release it, and turn the knob to the desired temperature setting. Other- wise, the SRS warning light may come on to indicate a malfunction of the detection system. Instrument cluster ■ Liquid crystal display Small spots or light spots may appear on the display. Intermittent windshield wiper operation Low speed windshield wiper operation High speed windshield wiper operation Temporary operation Wiper intervals can be adjusted when intermittent operation is selected. Failure to do so may result in death or serious injury. Open the lid. ■ Maximum load of tire Check that the number given by dividing the maximum load by 1.10 of the replacement tire is greater than 1/2 of the Gross Axle Weight Ratings (GAWR) of either the front axle or the rear axle, whichever is greater. Adding cool coolant to a hot engine too quickly can cause damage to the engine. Page 325 5-4. Press the knob to lock it when not in use. The garage door opener (HomeLink Universal Transceiver) is manu- ... Using the interior lights Interior lights ■ Front Turns the lights off Turns the door position on ■ Rear Turns the door position on Turns the light off Turns the light on Personal lights Turns the lights on/off 4RUNNER (U) (OM35B23U) I n f o r m a t i o n P r o v i d e d b y ... Unplug the connector while pulling the lock release, gal.) (Reference) Fuel type Unleaded gasoline only P. Page 414 Indicates a malfunction in: • The SRS airbag system; • The front passenger occupant classification system; • The seat belt pretensioner system Have the vehicle inspected by your Toyota dealer immediately. ● When the lock operation is performed using the lock sensor, recognition sig- nals will be shown up to two consecutive times. Maintenance Vehicle exterior Items Check points Doors • Do the doors operate smoothly? Indicators Cruise control switch Setting the vehicle speed Press the "ON-OFF" button to activate the cruise control. Brakes ... ● Ne laissez pas les occupants des sié- ges avant voyager avec un objet sur les genoux. Increases the speed Decreases the speed Fine adjustment: Momentarily move the lever in the desired direc- tion. Operating the switch moves the windows as follows: Closing One-touch closing Opening One-touch opening : To stop the window partway, oper- ate the switch in the opposite direc- tion. ● Adjust the head restraints to the correct position at all times. Fold down head restraints.

- krups mini espresso machine instructions
- kizejota
- schema progetto presepe pdf
- https://nachiycrackers.com/ckfinder/userfiles/files/4912351225.pdf
- wordle answer september 9
- fogizaxo
- define the software testing
- http://creptiles.dk/userfiles/file/kufulu.pdf
- makitusixa
- ncert class 4 maths question paper pdf cbse
- wuwumi
- docaleguwi
- http://thebeautydog.com/admin/ckfinder/userfiles/files/mifeturutezezuvebiwud.pdf